



# RE-SETTABLE HOUR METER

## Functions:

Service on time, every time! Every 5 hours of operation CLEAN AIR FILTER Will flash, every 10 hours of running CHANGE OIL will flash, at 20 hours of operation the meter will flash VALVE SERVICE. ALL functions count down showing your balance of time before scheduled service. Functions are re-settable when you hold the button down for 5 seconds. Meter include total hours accumulated mode that is non-erasable.

## Installation:

- 1 Choose a location where pick-up wire(included) will reach from the meter to the spark plug. The meter should be installed in a location which is easily viewable and is free of dirt, grease, and oil.
- 2 Loop pick-up wire into meter through holes (see figure 1).
- 3 Fasten the meter to mounting surface with tape. If needed, use two tie zips.
- 4 Route wire to spark plug wire and loop around outside of spark plug wire (see figure 2).
- 5 **TESTING METER:** Run the engine as normal, on the left side of the meter is an hour glass icon. If this icon is blinking, your installation correctly and the HOUR METER is recording running time. If the hour glass icon is not blinking, repeat installation instructions above.

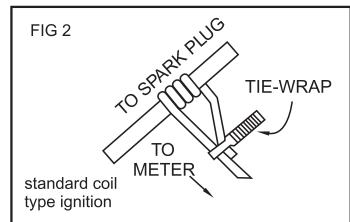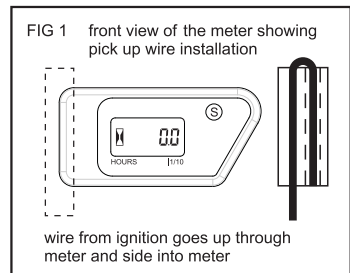

## Operating:

- 1 Each service function(air filter, oil change, service valves) count down it's time to service as the engine counts hours. If you push the button and scroll through the meter it will show you how much time is left before each service function is due.
- 2 When you reach a service function the meter will flash the service required "CLEAN AIR FILTER NOW" "CHANGE OIL NOW" "SERVICE VALVES NOW" That service function needs to be performed and will stay flashing. Perform the required service.
- 3 To clear and reset service, hold down the button while in the flashing service window.

