
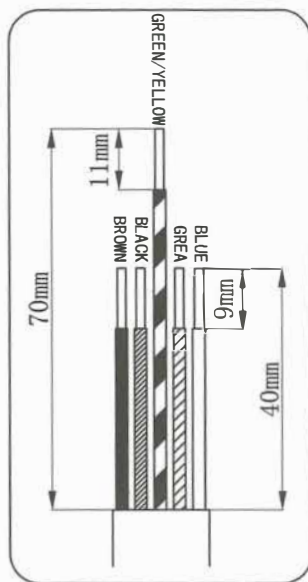


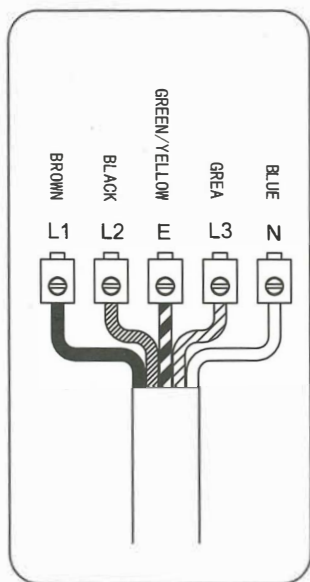

WIRING INSTRUCTION

- 1、 DO NOT CUT THE EARTH WIRE SHORT
- 2、 THIS APPLIANCE MUST BE CONNECTED TO
H05RR-F $2.5\text{mm}^2 \sim 4.0\text{mm}^2$
H07RN-F $2.5\text{mm}^2 \sim 6.0\text{mm}^2$ 5-CORE CABLE