



LED HEAD LIGHT INSTALLATION INSTRUCTIONS

1. Work under the specified voltage (DC9-30V)
2. This head light includes 4 functions: high beam, low beam, park light and heating function
3. Wiring requirements:

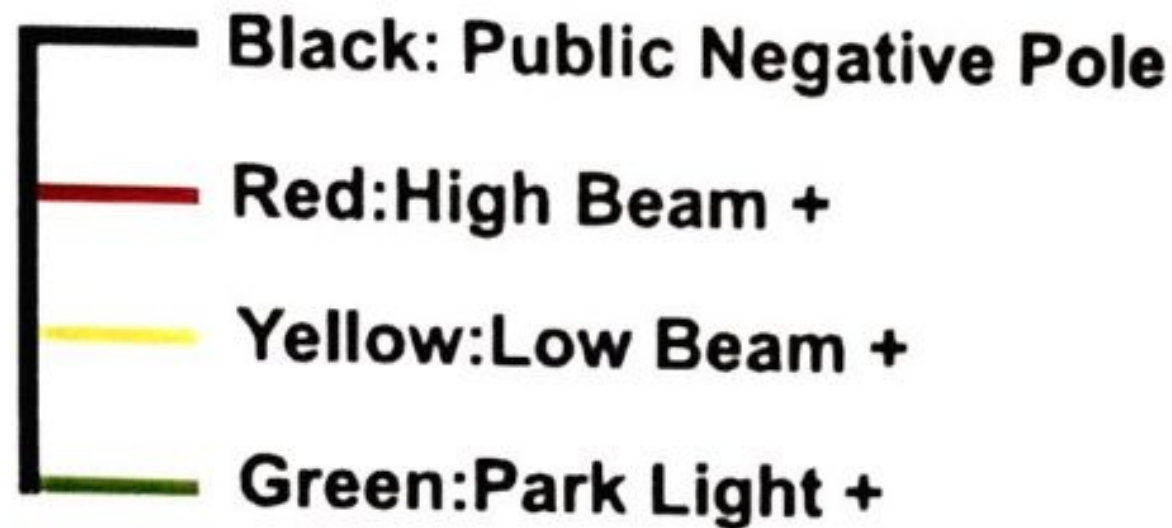

4. The heating function will be activated automatically when the light is on and the yellow LED indicates that the heating function is working. When the temperature of the front cover reaches approx. 40 °C, the heating function is turned off automatically.
5. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.
6. Keep heat-sink clean and exposed to maintain air flow.

Illustration of Multi Mounting Options :

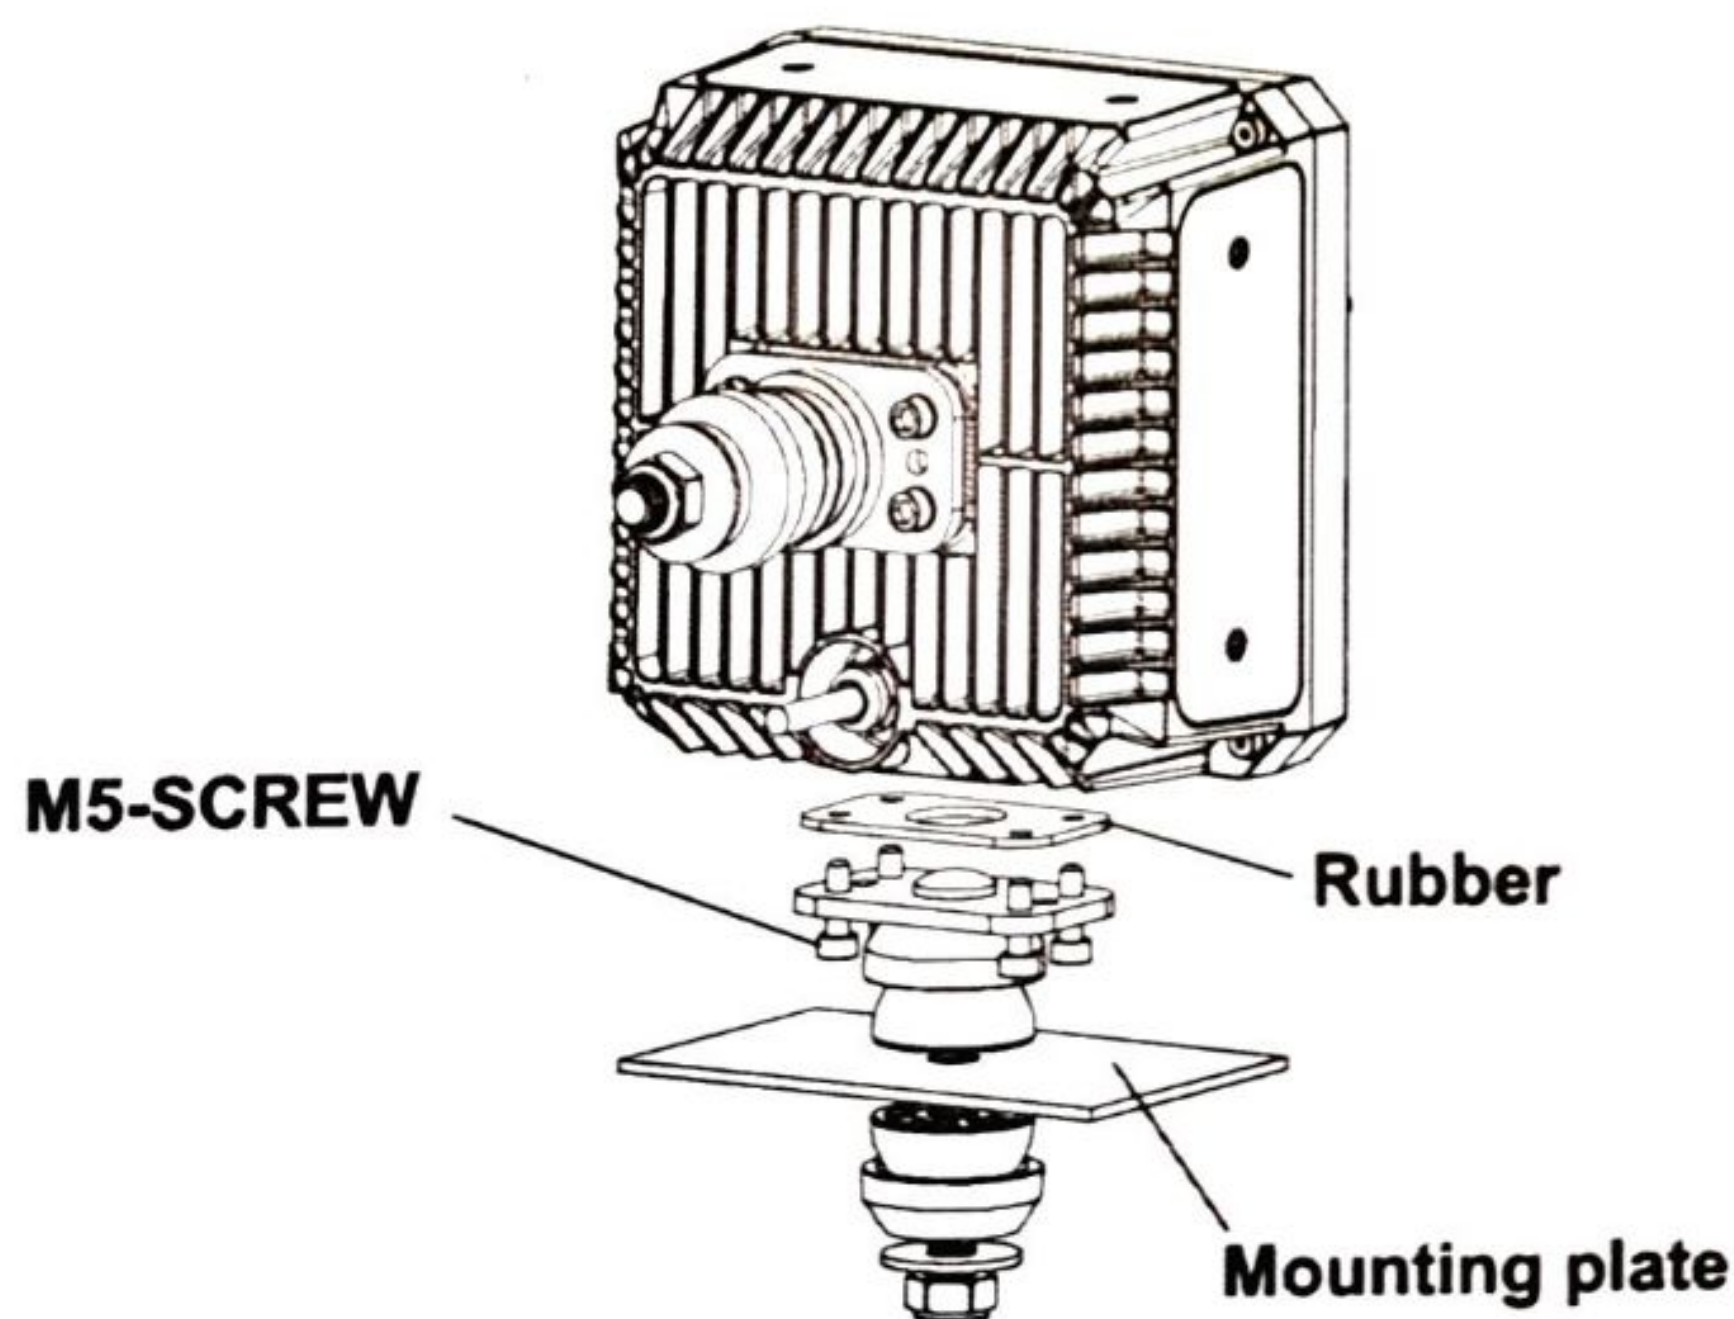

HL0415S2