



Installationshinweise

Wasserdichter Schalter/Taster:

WS 19RG Druckschalter
Einbau 19 mm, Led rot/grün

WS 22 RG Druckschalter
Einbau 22 mm, Led rot/grün

WT 19 RG Drucktaster
Einbau 19 mm, Led rot/grün

WT 22 RG Drucktaster
Einbau 22 mm, Led rot/grün

Operating Instructions

Waterproof Push Button:

WS 19RG Push Button *Latching*
for hole 19 mm, Led red/green

WS 22 RG Push Button *Latching*
for hole 22 mm, Led red/green

WT 19 RG Push Button *Momentary*
for hole 19 mm, Led red/green

WT 22 RG Push Button *Momentary*
for hole 22 mm, Led red/green

Anschluss Skizze /Wiring Diagram

Farben entsprechen den Farben des Kabelbaums/colors corresponding to the wire colors of the pigtail (Ansicht Kontakte Buchse/ view on contacts of the socket)

