


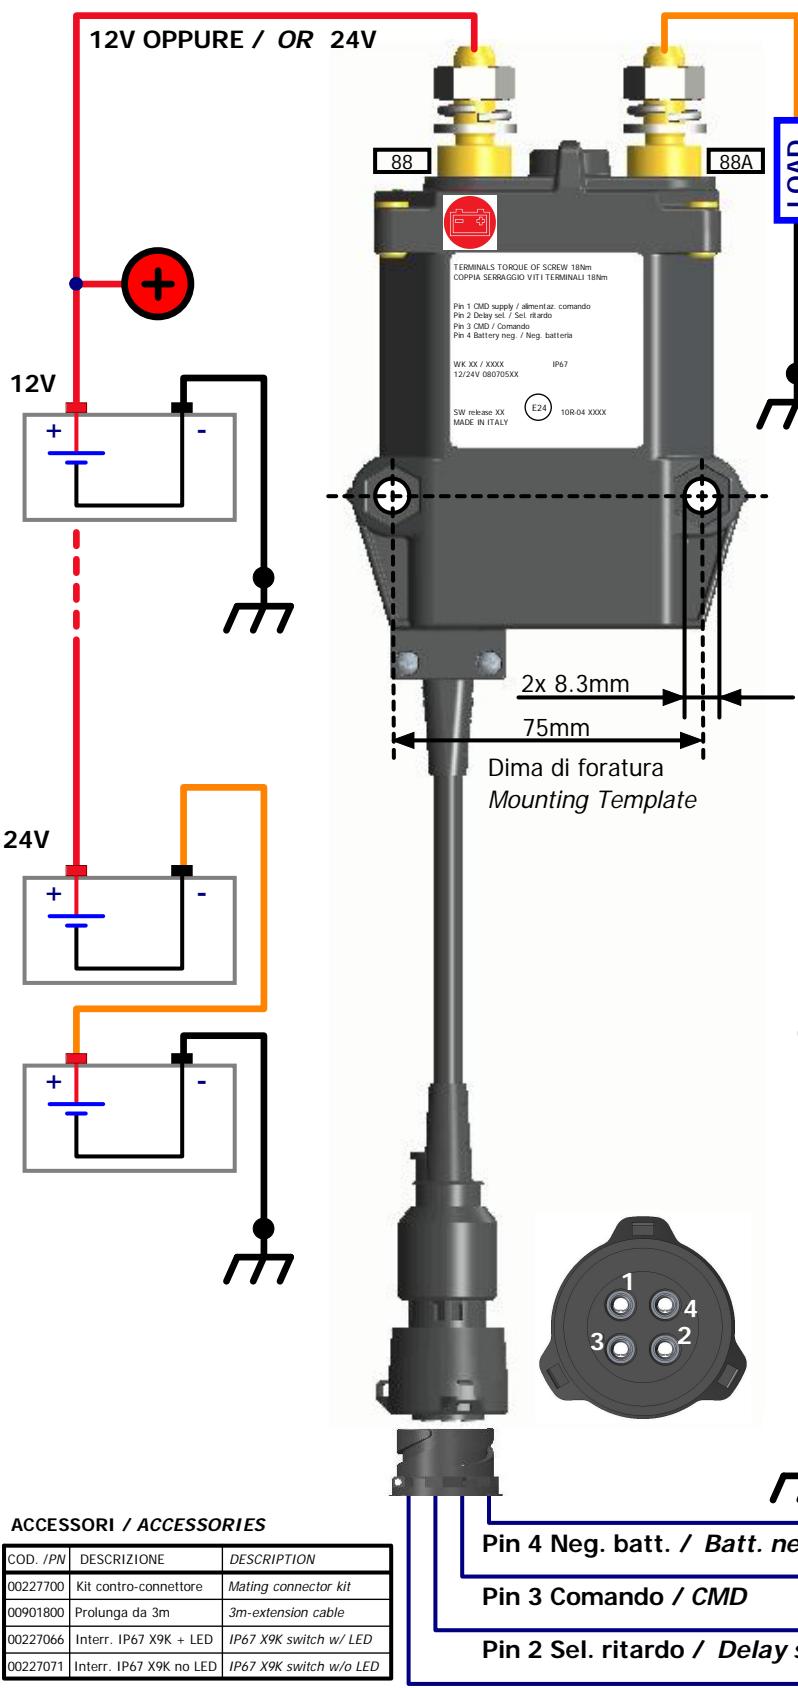

SCHEMA DI INSTALLAZIONE / INSTALLATION DIAGRAM TGC/RME-MS3 (+) P/N 080705.XX



INTERR. DI COMANDO / COMMAND SWITCH

OFF ON

OFF x3 ENTRO 3sec per EMERGENZA /
OFF x3 WITHIN 3sec for EMERGENCY

PER SELEZIONARE IL RITARDO /
TO SELECT THE DELAY CONNECT TO

NON CONNESSO / FLOAT
OFF delay = 0sec

NEGATIVO / NEGATIVE
delay = 30sec

POS. o PIN1 / POS. or PIN1
delay = 300sec

Pin 1 alimentaz.+ comando / CMD+ supply

AVVERTENZE:
La MEMBER'S SpA non è responsabile per qualsiasi danno che può, direttamente o indirettamente, riguardare persone, oggetti o animali come conseguenza della mancata osservazione delle indicazioni incluse nel presente manuale.
La MEMBER'S SpA si riserva il diritto di cambiare funzionalità e dati descritti nel presente manuale senza preavviso, allo scopo del miglioramento del prodotto. Questo manuale non può essere considerato un contratto verso terze parti.

NOTICE:
MEMBER'S SpA is not liable for any damage that can, directly or indirectly, affect persons, objects and pets as a consequence of failure to comply with the indications included in this manual.
MEMBER'S SpA reserves the right to change the features and data described in this manual without forewarning, in order to improve the product. This manual cannot be considered as a contract for third parties.